



AgroMax

CLONER


GROW TENT INSTRUCTIONS

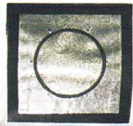

1 VENT PORT COVER


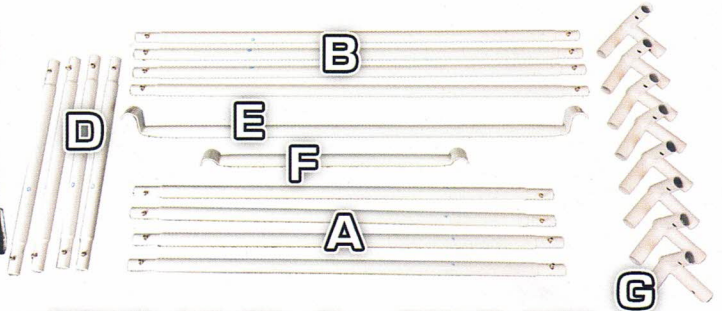


A = FOUR 26.5" B = FOUR 30"
 D = FOUR 13" E = ONE 16"
 F = ONE 29" G = 8 CORNERS

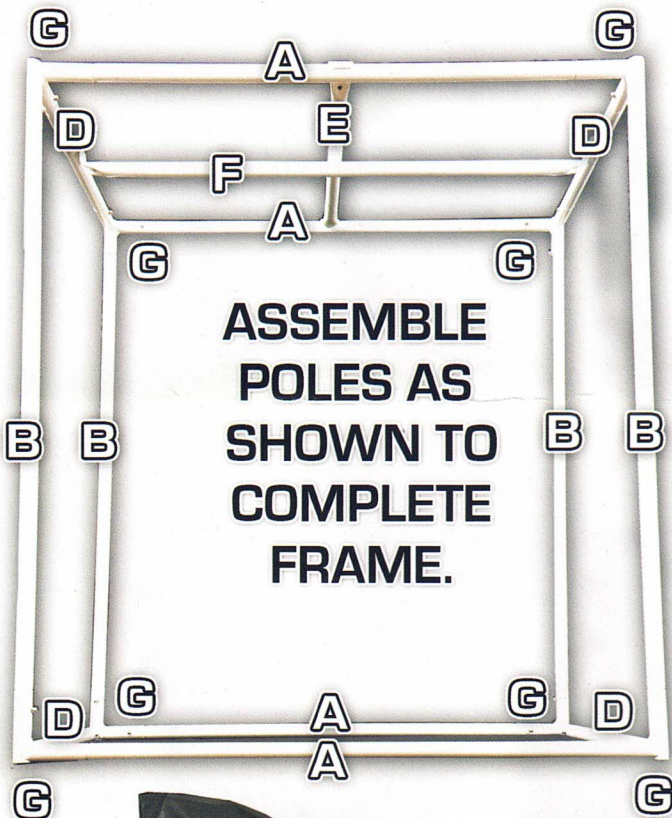

CONNECTIONS

FIGURE A

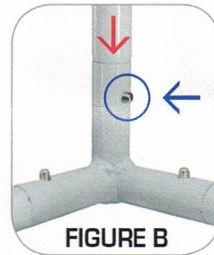

1. Depress chrome nipples and insert male connectors into female receiver slots.
2. Allow chrome nipples to lock into place through female connectors.

PLEASE NOTE:

- * B & C POLES ATTACH TOGETHER AS SHOWN ABOVE (FIG. A)
- * METAL CORNERS SHOULD BE ATTACHED AS SHOWN (FIG. B)
- * VENT PORT COVERS GO OVER VENT HOLES
- * PLEASE BE PATIENT AND GENTLE WHEN PULLING SKIN OVER TENT FRAME TO AVOID TEARING SEAMS



UNZIP TENT SKIN AND SET FRAME INTO BOTTOM OF TENT SKIN



CAREFULLY PULL TENT SKIN OVER FRAME



LAY TENT FLOOR LINER IN PLACE AND TIE TO TENT CORNERS



ZIP UP DOOR PANEL. YOUR TENT IS NOW READY FOR LIGHTING, VENTILATION & PLANTS / CLONER